


ART. 109 S(

BALL VALVE IN NICKEL PLATED BRASS FOR SOLAR SYSTEM WITH MONOBLOCK EXTENSION

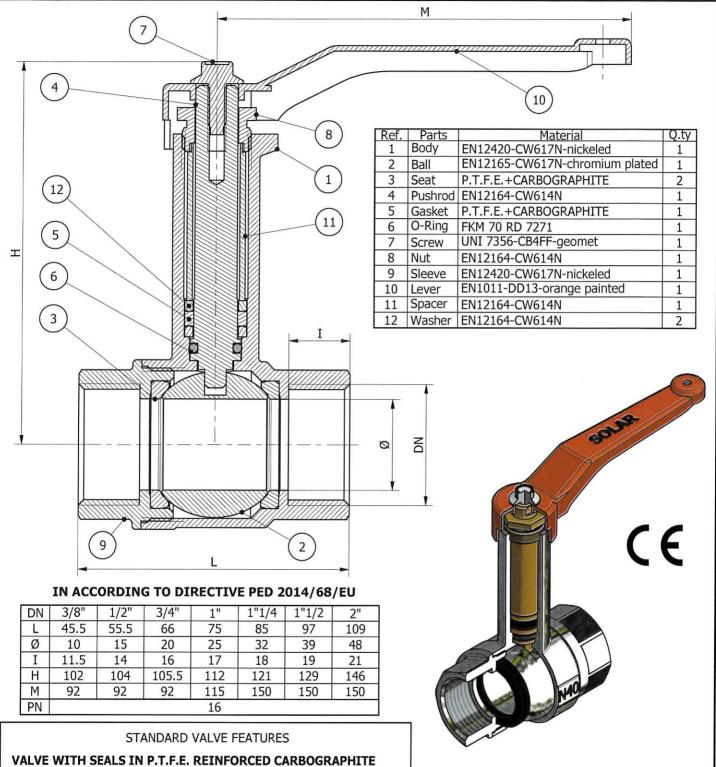

-Working temperature: MIN. -20°C / MAX. up to a peack of +180°C; below 0 °C only in absence of ice or with antifreeze additives max 50%, over 100 °C only in absence of steam

-Max. pressure: 16 bar (40 bar from -10 °C to +100 °C)

-Threaded ends: ISO 228/1

We don't assume the responsibility if you use products which are not consistent with the material used for the costruction of our valves.

To be used as a guide only, IDROSFER reserve the right to change these data without notice.

01/2018



INSTRUCTIONS

IST. DATA SHEET - 014 ING

Rev. 0

ASSEMBLY, USE AND MAINTENANCE INSTRUCTION

IN ACCORDING TO DIRECTIVE PED 2014/68/EU

EQUIPMENT PRESSURE DESCRIPTION: TWO AND THREE-WAY BALL VALVE FOR SOLAR SYSTEMS. WITH BRASS BODY FLOATING BALL

NOT DANGEROUS FLUIDS, GROUP 2, TAB. 9

USE

The intercepted fluids are not dangerous fluids (group 2) and must be compatible with the construction materials of ball valve: brass, PTFE, PTFE reinforced carbographite, FPM, EPDM, NBR, FKM.

Mixture with water and antifreeze liquids (glycol) max. 50%.

THE MAX PRESSURES IN ACCORDING TO THE WORKING TEMPERATURES ARE THE FOLLOWING:

* temperature °C	PN 16	Ball's tightness seats
* from -20 °C up to a peack of +180 °C	16 bar	PTFE + CARBOGRAPHITE

^{*} MATERIAL RESISTENCE'S DATA

WARNING!

IT IS USEFUL TO EMPTY THE BALL VALVE AND THE SYSTEM COMPLETELY WHEN THE INTERCEPTED FLUID COULD SOLIDIFY AT TEMPERATURES LOWER THAN 0°C (FOR EX., WATER) AND INCREASE ITS VOLUME DAMAGING ITS SEALING.



INSTRUCTIONS

IST. DATA SHEET - 014 ING

Rev. 0

ASSEMBLY

Before installing make sure the pipe into which the valve is screwed does not show impurities that may damage the ball and the seat tightness causing leaking.

To seal the threadings use a dope compatible with the intercepted fluid without exceeding to avoid unuseful efforts when assembling.

After installing make sure the valve does not undergo stresses due to an exceeding anchorage distance or to unparallel pipes, then, support the pipes with the proper clamps.

The valve must be manoeuvred exclusively with the lever handle supplied with the kit without using any other supplementary lever handles.

Turn the lever handle by 90° clockwise to close the valve until it reaches its beat.

Turn the lever handle by 90° anticlockwise to open the valve until it reaches its beat.

The ball valve must always be fully open or fully closed.

Any intermediate position of the valve may cause long-lasting bucklings of the tightness seats which make the intercepted fluid leak.

To avoid water hammering on the pipes manoeuvre the valve by a gradual rotation.

When testing the systems never use pressures higher than the nominal pressure shown on the valves; that could buckle the seats and the gaskets and damage their sealing irremediably.

MAINTENANCE

Before take a valve apart, make sure that the pipe are not under pressure.

Every six months check the valve visually to verify there are no defects that may cause problems when using it and, if the case, replace it. Before acting on the valve make sure that the pipes are not under pressure. We are not responsible in case of tampering of our valves without our authorization, in this case the warranty expires.

WASTE DISPOSAL

After replacement of the valve, it must be disposed according to the laws (about the waste disposal) of the Country of destination.

The waste (disused valve) can also be identified as recyclable material.



INSTRUCTIONS

IST. DATA SHEET - 014 ING

Rev. 0

LIST OF INCOMPATIBLE SUBSTANCES

Many chemical substances react in a dangerous way when they come in touch with others.

Please find below a list of the main incompatible substances, by way of a non-limiting example.

Acetylene Acetone	with copper (piping), halogens, silver, mercury and their compounds	
Acetone	with concentrated mixtures of sulphuric and nitric acid	
Acetic acid	with chromic acid, nitric acid, hydroxyls, ethylene glycol, perchloric acid, peroxides and permanganates	
Chromic acid	with acetic acid, naphthalene, camphor, alcohol, glycerol, turpentine and inflammable fluids	
Nitric acid	with acetic, chromic and cyanogenic acid, aniline, carbon, hydrogen sulphide ,fluids, gases and substances that are promptly nitrated	
Oxalic acid	with silver and mercury	
Perchloric acid	with acetic anhydride, bismuth and its alloys, alcohol, paper, wood, fats and other organic substances	
Hydrogen sulphide	with nitric acid and oxidants.	
Sulphuric acid	with chlorates, perchlorates, permanganates and water.	
Alcohols and Polyols	with nitric acid.	
Anhydrous ammonia	with mercury, halogens, calcium hypochlorite and hydrogen fluoride	
Ammonium nitrate	with acids, metal powders, sulphur, combustible materials	
Aniline	with nitric acid and hydrogen peroxide	
Silver	with acetylene, oxalic acid, tartaric acid and ammonic compounds	
Arsenic (materials containing	with any reducing agent	
Azidos	with water.	
Chlorine dioxide	with ammonia, methane, phosphine, hydrogen sulphide	
Bromine	with ammonia, acetylene, butadiene, butane, hydrogen, sodium carbide, turpentine and	
Activated carbon	with all oxidizing agents, calcium hypochlorite	
Cyanides	with acids and alkali	
Chlorates	with ammonia salts, acids, metal powders, sulphur, finely pulverized organic and flammable compounds and carbon	
Oblasias	with ammonia, acetylene, butadiene, petrol and other by-products of oil, hydrogen, sodium	
Chlorine	carbide, turpentine and finely pulverized metals	
Chloroform	with sodium and potassium	
Chlorides	with sulphuric acid	
Dichloromethane	with sodium and potassium	
Chlorine dioxide	with ammonia, methane, phosphine, hydrogen sulphide	
Fluorine	with all other chemical substances	
(White) phosphorus	with air, oxygen, alkali, reducing agents	
Hydrocarbons in general	with fluorine, chlorine, formic acid, chromic acid, sodium peroxide	
Hydrogen sulphate	with nitric acid vapours and oxidizing gasses	
lodine	with acetylene and ammonia	
Hypochlorite	with acids, activated carbon	
Flammable fluids	with ammonium nitrate, chromic acid, hydrogen peroxide, nitric acid, sodium peroxide and halogens	
Mercury	with acetylene, fulminic acid, hydrogen	
Alkaline metals(e.g. calcium potassium, sodium)	with water, carbon dioxide, carbon tetrachloride, and other chlorinated hydrocarbons with acids, metal powders, flammable fluids, chlorates, nitrates, sulphur and finely pulverized	
Ammonium nitrate	organic substances or flammable compounds	
Nitrites and Nitrates	with acids	
Nitroparaffin	with dolds with inorganic bases, amines	
Calcium oxide	with water	
Oxygen	with oils, fats, hydrogen, flammable fluids, solids and gasses	
Phosphorus pentoxide	with water	
Potassium perchlorate	with sulphuric acid and other acids.	
Potassium permanganate	with glycerol, ethylene glycol, benzaldehyde and sulphuric acid	
Hydrogen peroxide	with chromium, copper, iron, most other metals and their salts, flammable fluids and other combustible materials, aniline and nitromethane	
ilyalogoli poloxiao		
Sodium peroxide	with any oxidizable substance, such as methanol, glacial acetic acid, acetic anhydride, benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural.	
Sodium peroxide	benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural.	
Sodium peroxide Potassium	benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural. with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane	
Sodium peroxide Potassium Copper	benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural. with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with acetylene, azide and hydrogen peroxide	
Sodium peroxide Potassium Copper Sodium	benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural. with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with acetylene, azide and hydrogen peroxide with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with lead, copper and other metals. This compound is usually employed as a preservative, but it	
Sodium peroxide Potassium Copper Sodium Sodium	benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural. with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with acetylene, azide and hydrogen peroxide with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with lead, copper and other metals. This compound is usually employed as a preservative, but it forms unstable and explosive compounds with metals	
	benzaldehyde, carbon disulphide, glycerol, ethyl acetate and furfural. with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with acetylene, azide and hydrogen peroxide with carbon tetrachloride, carbon dioxide ,water, chloroform, dichloromethane with lead, copper and other metals. This compound is usually employed as a preservative, but it	